



Applied Systems Engineering, Inc.

1671 Dell Avenue, Suite 200 • Campbell, CA 95008 • Phone: (408) 364-0500 FAX: (408) 364-0500  
e-mail: [products@applsyseng.com](mailto:products@applsyseng.com) • WEB: <http://www.applsyseng.com>

## Setting the SPT4-NET IP Address

27 February 2003

The following steps describe how to configure the SPT4-NET's IP address.

1. Connect a null-modem serial-communication cable between a COM port on your PC and the maintenance port on the SPT4-NET
2. From the SPT4-NET Configuration Editor, select *View* and *Options*
3. Verify and set data fields as follows:
  - Set port number to the PC COM port in use
  - Verify that the speed is 19200
  - Check the *Use Serial Connection* box

Select OK

4. Select *SPT* and *Network*. The Configuration Editor will query the SPT4-NET box and display current network settings
5. Set the correct IP address. Do not change any other fields
6. Select *OK*. The new configuration will be sent and permanently stored in the SPT4-NET